

## **Direction For Use And Maintenance**

## For cleaning the inner side of grinder;

- \* Remove the jar (12) and adjusting mechanism (11).
- \* Take out the inner burr (10) and spring (8).
- \* Pu**ll** out the shaft (6) from the upper side.

Clean the residual coffee powder with a brush.



Do not bring the main body of the grinder contact with water; just use a damp cloth for cleaning.

\* If the mill is exposed to some detergent in the dish washer, the next coffee you will prepare may contain unpleasant smell and taste.

G50+

## INSTRUCTIONS FOR USE