



Technical Specifications	
Width	: 58 mm
Height	: 103 mm
Weight	: 400 gr
Burr Diameter	: 38 mm



Direction For Use And Maintenance

For cleaning the inner side of grinder;

- * Remove the jar (14) and adjusting mechanism (13).
 - * Take out the inner burr (11) and spring (9).
 - * Pull out the shaft (6) from the upper side.
- Clean the residual coffee powder with a brush.



Do not bring the main body of the grinder contact with water; just use a damp cloth for cleaning.

* If the mill is exposed to some detergent in the dish washer, the next coffee you will prepare may contain unpleasant smell and taste.

POCKET

INSTRUCTIONS FOR USE

